



WS - Werkschakelaar (optioneel)  
Isolator switch (option)  
Reperaturschalter (Wählbar)  
L'interrupteur de proximité (facultative)

TB - Thermocontact  
Thermal contact  
Thermokontakt  
Contact thermique

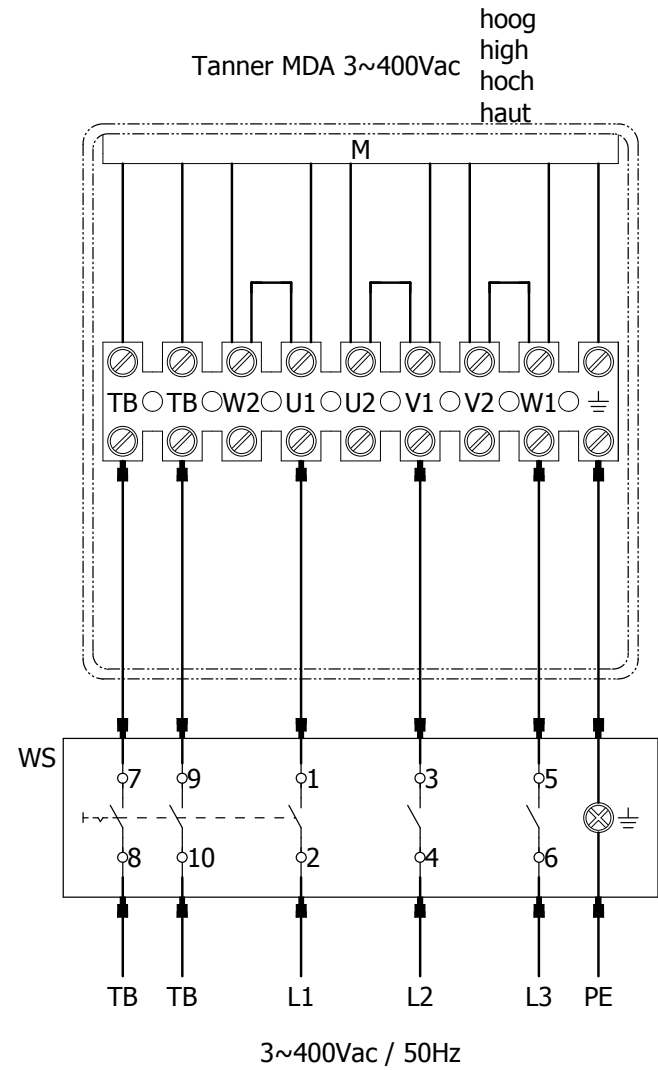

Door het verwisselen van L1 en L2, verandert de draairichting.  
By changing L1 and L2 you can change the rotation direction.  
Mittels Umtauschen L1 und L2 kann man die Drehrichtung ändern.  
En inversant L1 et L2, on change la direction de rotation.


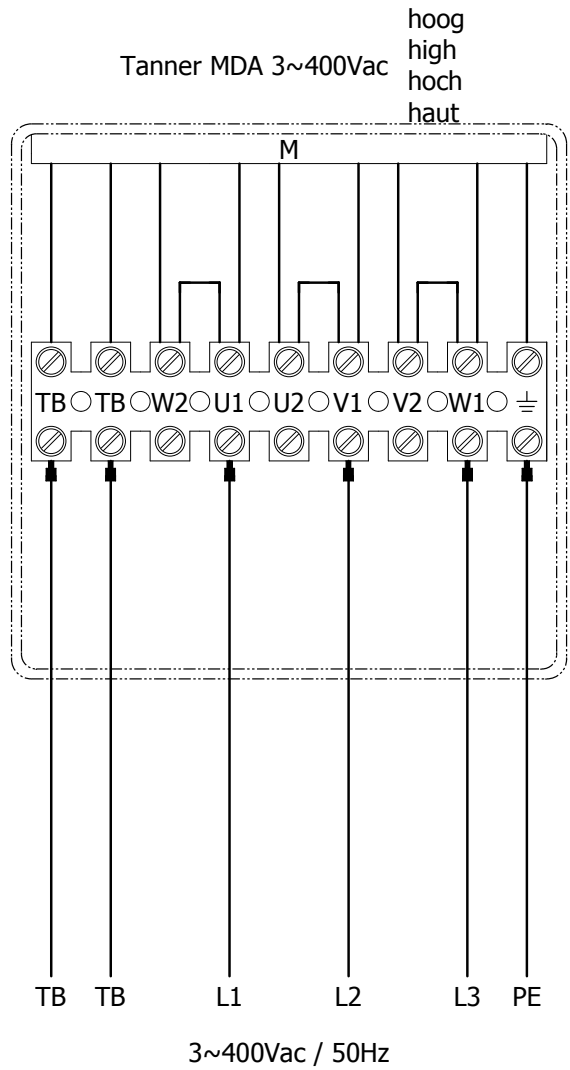


WS - Werkschakelaar (optioneel)  
Isolator switch (option)  
Reperaturschalter (Wählbar)  
L'interrupteur de proximité (facultative)

TB - Thermocontact  
Thermal contact  
Thermokontakt  
Contact thermique



Door het verwisselen van L1 en L2, verandert de draairichting.  
By changing L1 and L2 you can change the rotation direction.  
Mittels Umtauschen L1 und L2 kann man die Drehrichtung ändern.  
En inversant L1 et L2, on change la direction de rotation.

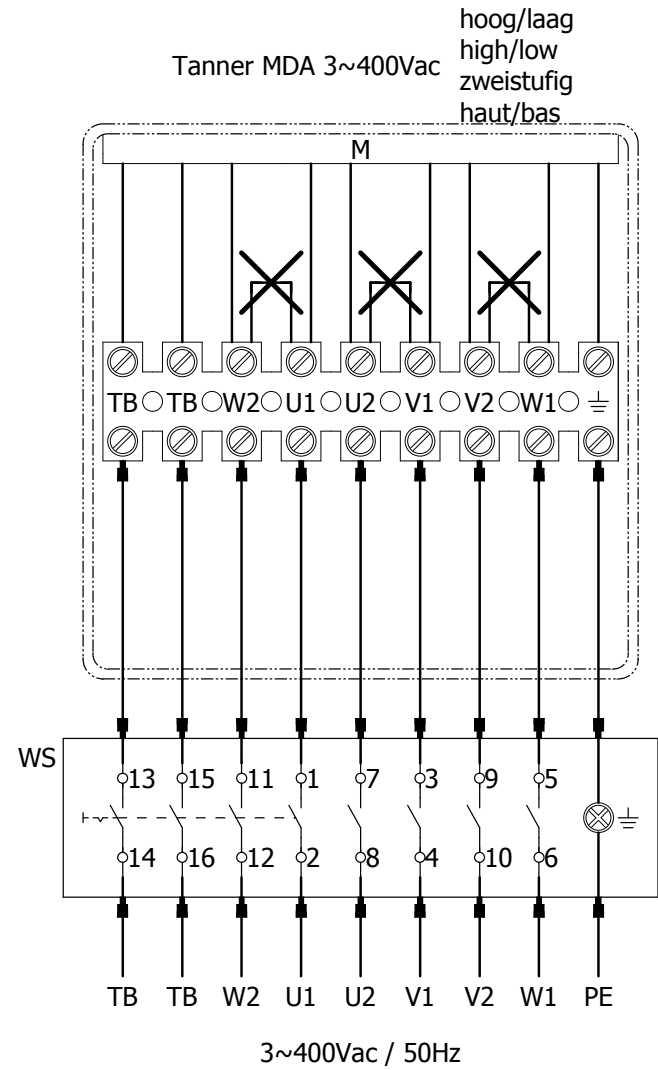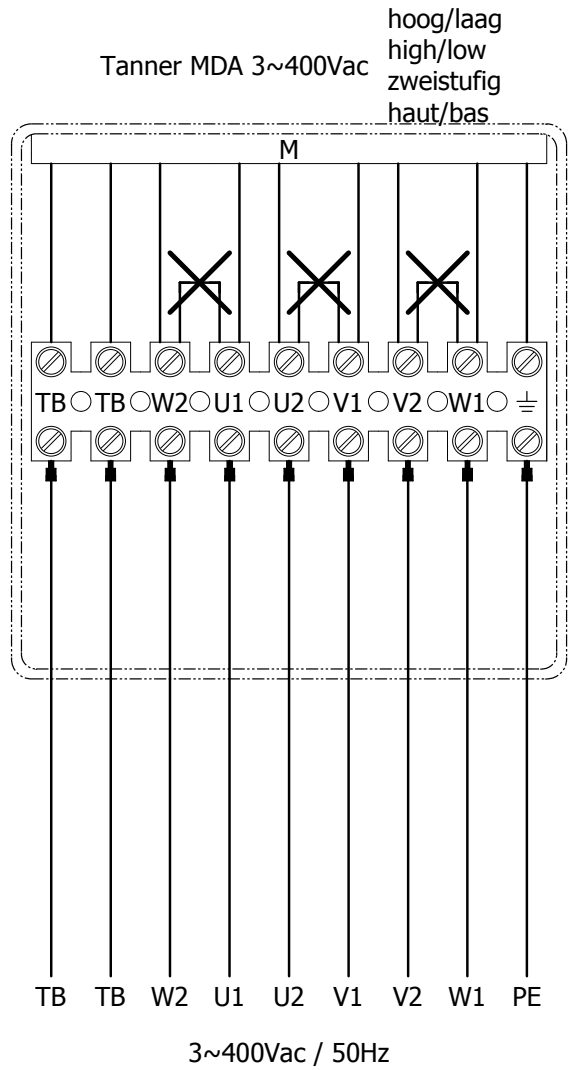

WS - Werkschakelaar (optioneel)  
Isolator switch (option)  
Reperaturschalter (Wählbar)  
L'interrupteur de proximité (facultative)

TB - Thermocontact  
Thermal contact  
Thermokontakt  
Contact thermique

**X** Doorverbinding in de motor verwijderen !!!  
Remove connection inside motor !!!  
Brücke im Motor entfernen !!!  
Éliminer les connexions en transfert dans le moteur !!!